
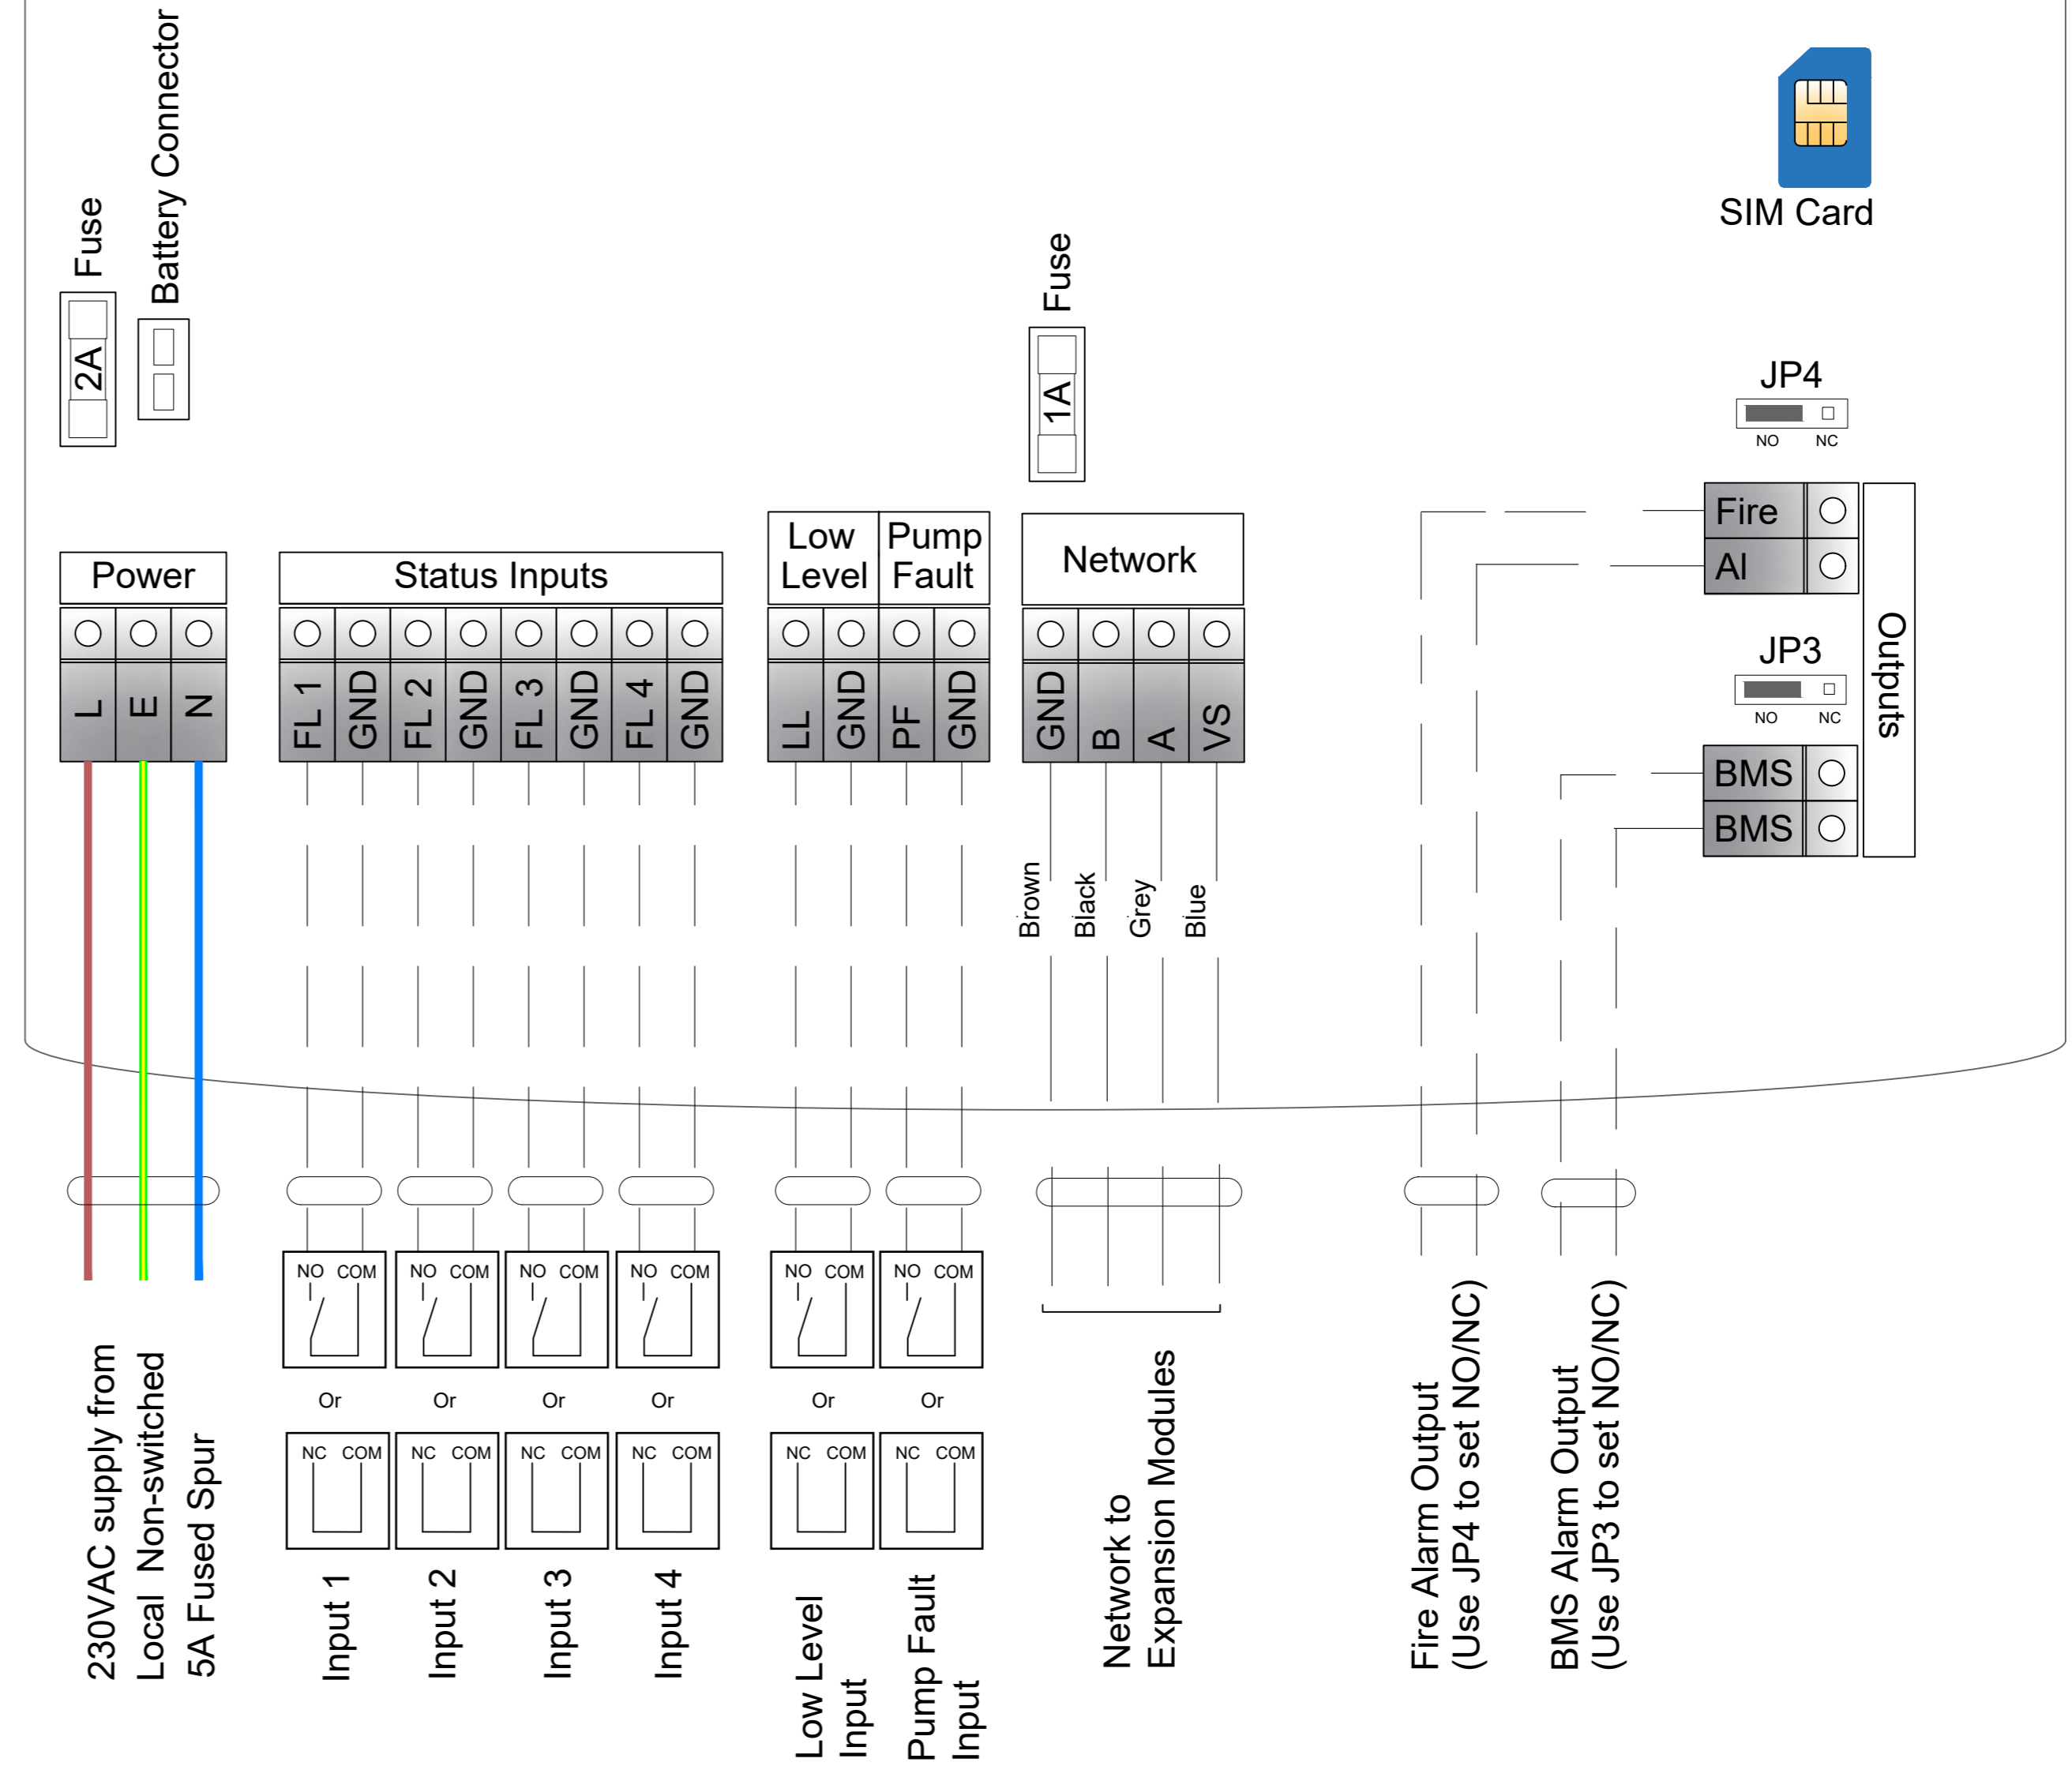


# MASTER PANEL

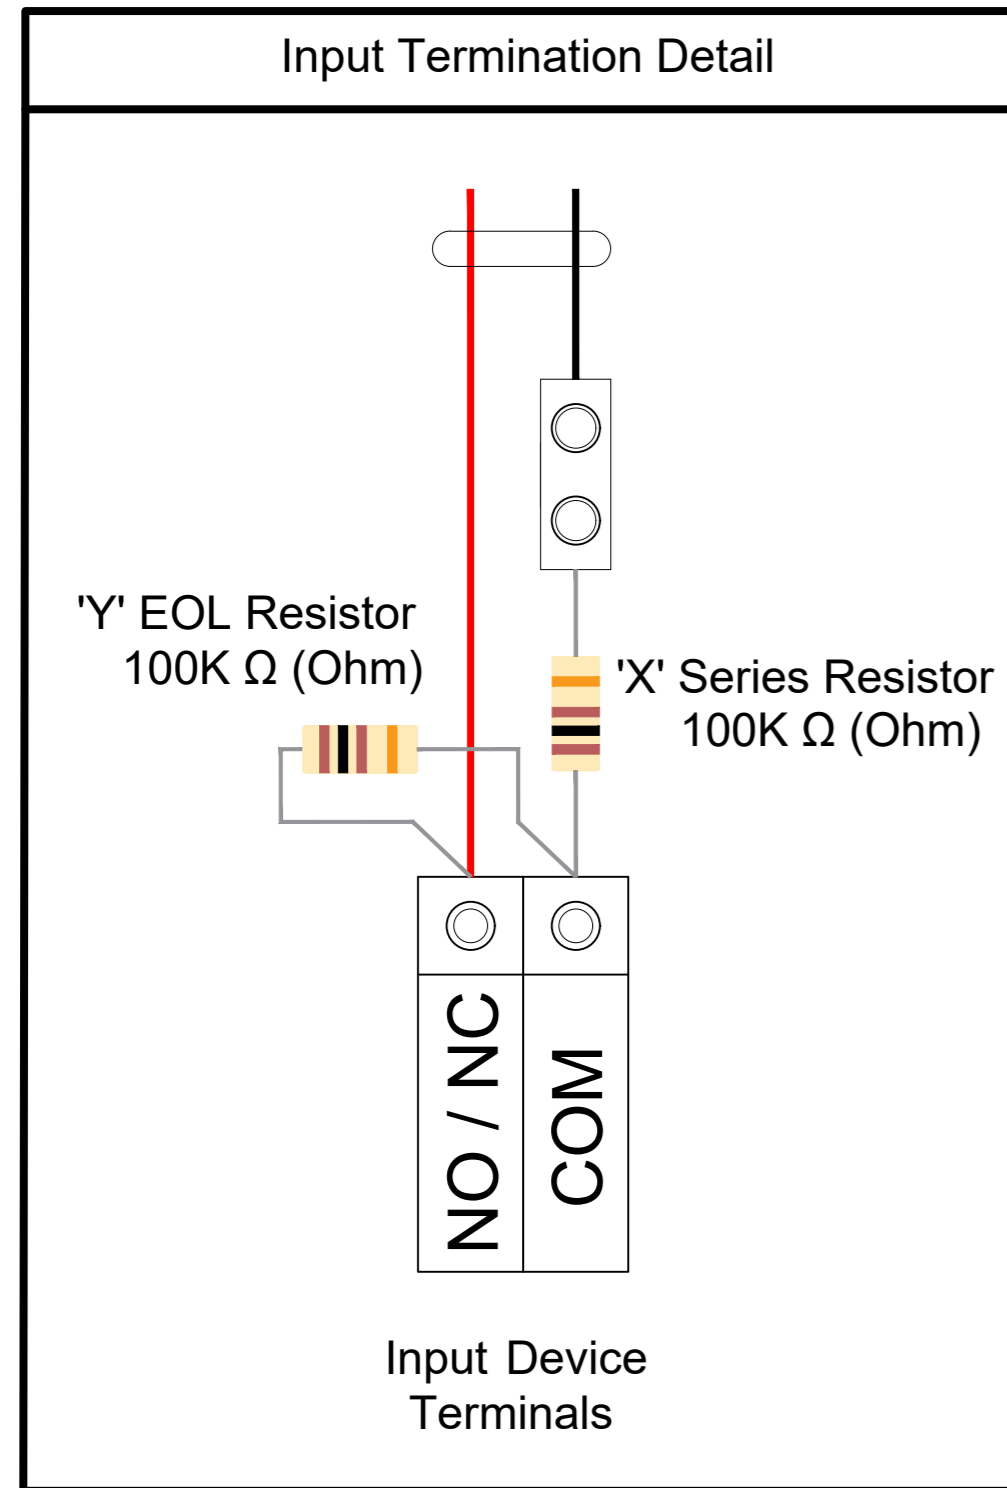

Cable Size:  
2 Core FP200 1/1.5mm<sup>2</sup> for inputs  
4 Core FP200 1/1.5mm<sup>2</sup> for network



Inputs 1-4 can be configured as ;


Flow Switch  
Isolation Valve  
Heating System  
Pump Running


FloWatch Master Panel  
Wiring Diagram

Revision 1

# EXPANSION MODULE

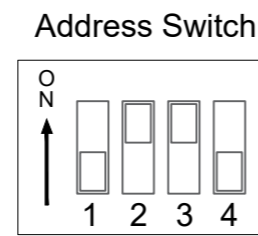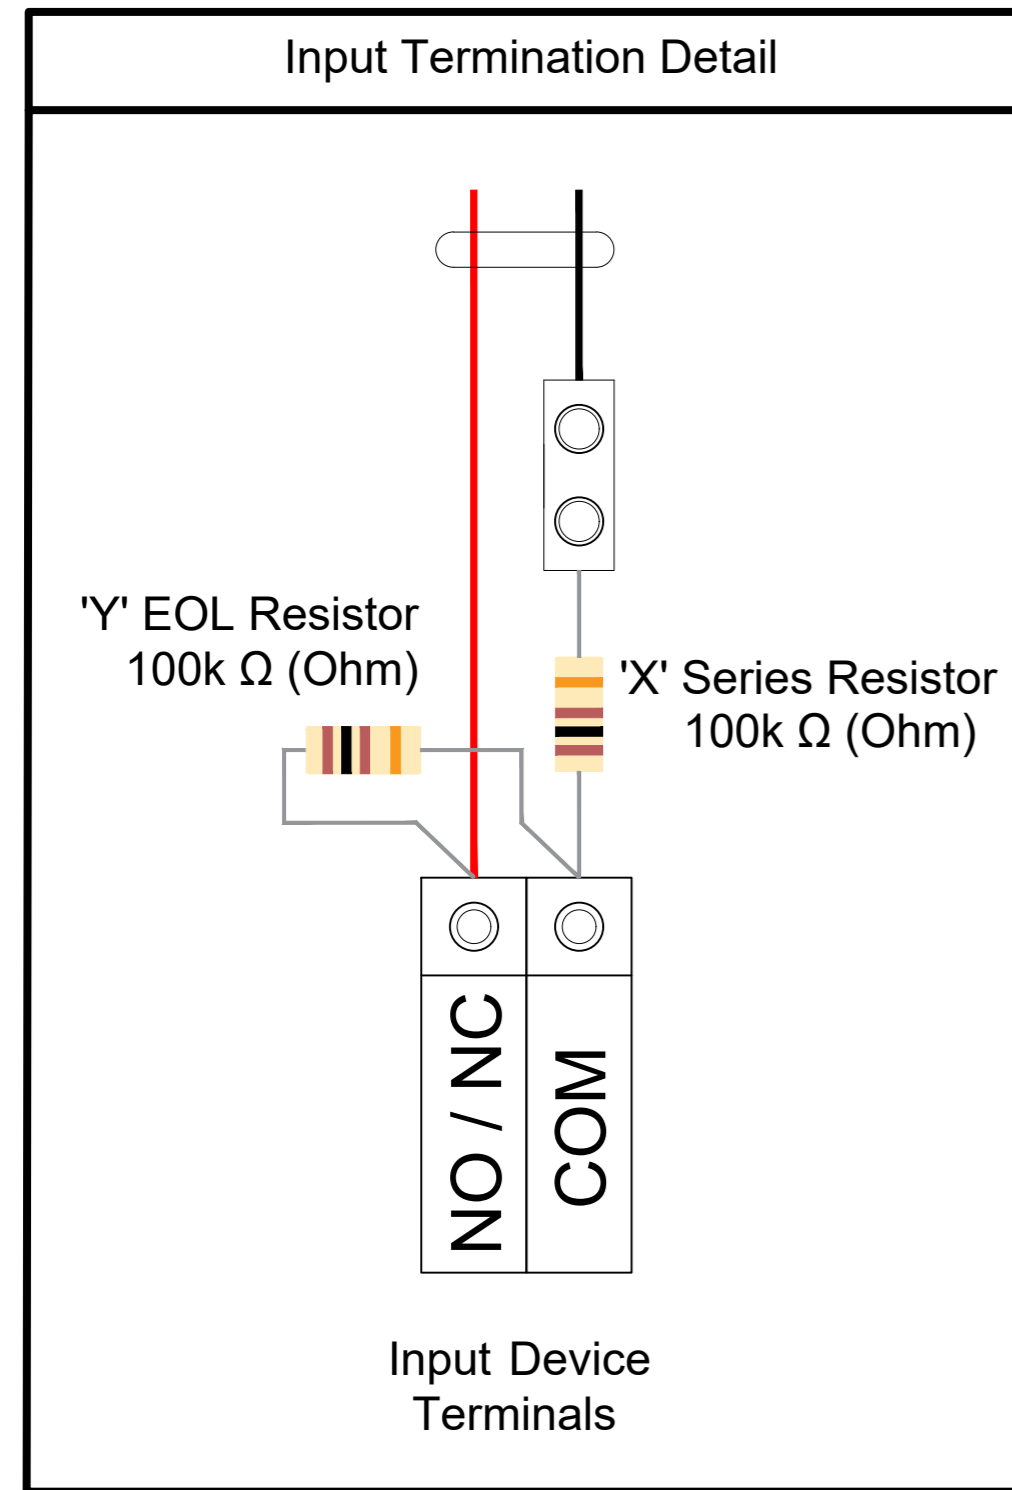

 SW2 Terminator  
Last Expansion module must have SW2 switched ON ( to left )

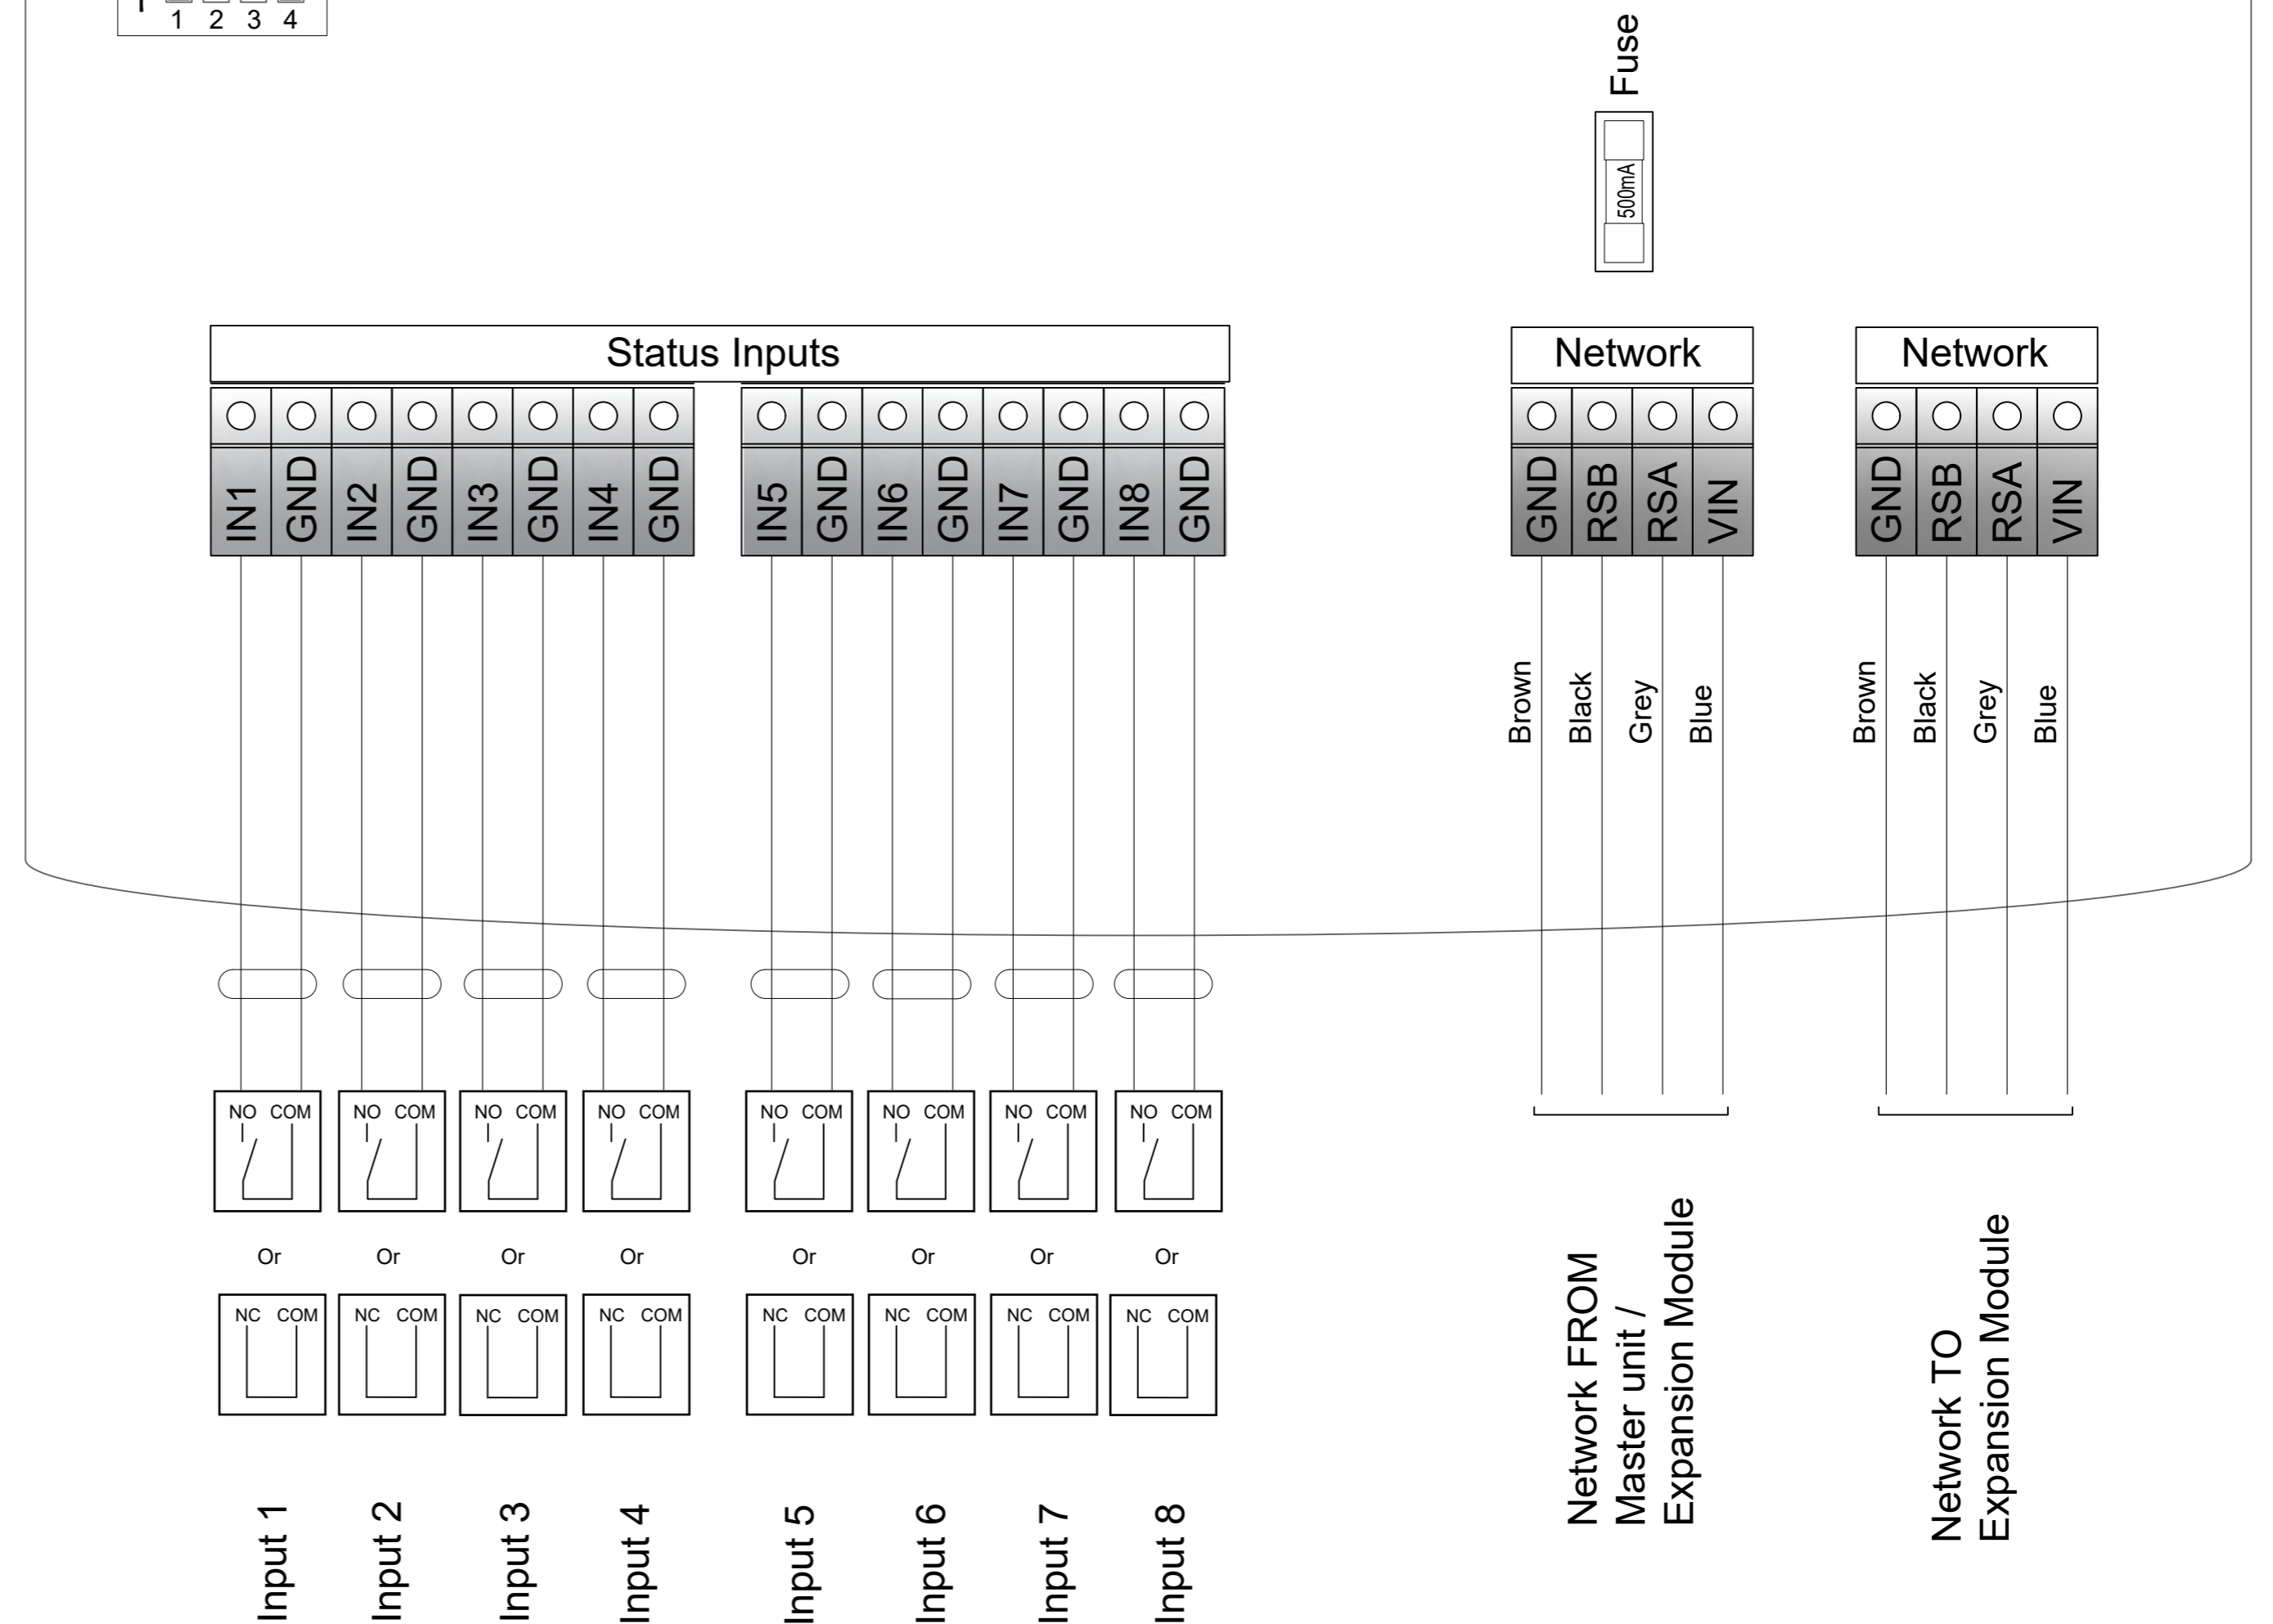

Cable Size:  
2 Core FP200 1/1.5mm<sup>2</sup> for inputs  
4 Core FP200 1/1.5mm<sup>2</sup> for network

Inputs 1-8 can be configured as ;  
Flow Switch  
Isolation Valve  
Heating System  
Pump Running

Refer to Installation, Operational & Maintenance manual for 'Addressing' and connecting expansion modules

FloWatch 8 Way Expansion Module  
Wiring Diagram

Revision 1