ROOF

FOURTH
Apartment Apartment Apartment
IN7 - Flow Switch
IN8 - Isolation Valve
Apartment Apartment Apartment Apartment Apartment

THIRD
Apartment Apartment Apartment
IN5 - Flow Switch
IN6 - Isolation Valve
RISER
8 Way Expansion
Apartment Apartment Apartment Apartment Apartment

SECOND
Apartment Apartment Apartment
IN3 - Flow Switch
IN4 - Isolation Valve
Apartment Apartment Apartment Apartment Apartment

FIRST
Apartment Apartment Apartment
IN1 - Flow Switch
IN2 - Isolation Valve
4 Core Cable
or
2 x 2 Core
Apartment Apartment Apartment Apartment Apartment

Ground

4 Core Cable

Communal Area

PF - Pump Fault

Master Panel
RS485 Inputs Out 230V
SMS
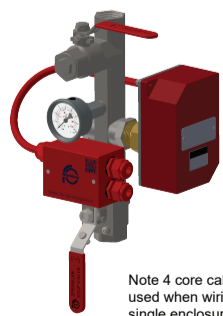
Pump Controller

Plant Area

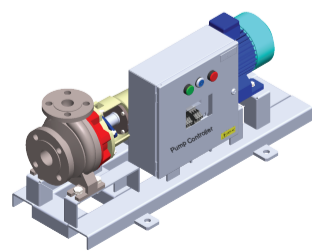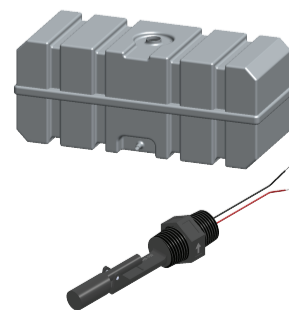Tank Low Level

2 Core Cable

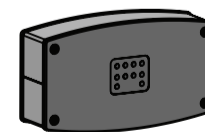230VAC

KEY :

Residential Riser

Note 4 core cable can be
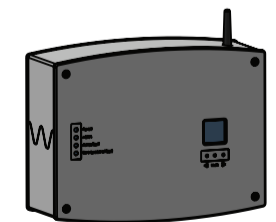used when wiring to pre-wired
single enclosure

Pump Fault

Water tank with low level
switch

FloWatch 8 Way
Expansion module

FloWatch
Master Panel